



Specific user parameters or an automatic boot up sequence may be saved in the non-volatile memory of the keypad. Before resetting the keypad memory, review the programmed user settings and write them down before clearing the memory. User parameters can be accessed through the keypad.exe program originally provided with your machine.

1. Turn the plotter power on. (LP 4000: Press ALT to initialize)
2. Press the following keys to clear the keypad memory:

ALT, UR, ORIGIN, ORIGIN, ORIGIN, ALT, 1, RESET, ALT, RESET

All keypad lights will illuminate for a second, then the power light will illuminate. This indicates the keypad memory has been cleared. All previously programmed user settings will revert to factory defaults.