



The Auto View feature of the machine scrolls the material forward & back after the user has selected a page size. This is to allow a physical view of the paper size set. If you do not want the paper to scroll back and forth after you select a page size, disable the Auto View feature from the plotter keypad.

1. Turn plotter on.
2. Press the following keys to program User 1 parameters to shut off the Auto View:
ALT, UR, 1 ALT, 1, ALT, VIEW, 0.
3. Turn plotter off.
4. Turn plotter on. Position the pen over the paper.
5. Press: ALT, UR, 1, LL, SIZE, *n*, SIZE, ON-LINE.

This will have allowed you to select User 1 settings, which you just programmed with the page view parameter of 0 (off), and then set up the plotter as you normally would.