

The following procedure pertains to the "Blue Logic Board" for the Studio 7.

Sometimes, clearing the memory of the Studio 7 will solve many problems totally unrelated to the memory. The following procedure will reset the plotter to factory defaults and will dump anything that might be causing the plotter to act differently than expected.

1. Move the carriage to the left end plate.
2. Turn the Studio 7 off and unplug from power source.
3. Remove the row of screws across the front and the back of plotter.
4. Lift plotter off bottom pan and lay on its top on a flat surface.
5. On the main logic board, locate JP2, which is marked clr/run.
6. Jumper the left and middle posts together.
7. Turn machine on.
8. Watch the carriage move to the right. Turn the machine off when the carriage reaches the right end plate.
9. Remove the jumper from JP2.

The memory of the plotter is now reset to factory defaults.