

Determine Ioline USB Driver Version in Windows

Updated 4.19.2013

KSR

To determine the **Ioline USB driver version** in any Windows operating system (XP or newer) follow these steps (**NOTE: this process only works with Ioline equipment manufactured on or after January 1, 2008**):

1. Connect an Ioline product by USB to your PC then turn it on (*green LED on keypad is NOT required*).
2. Open the **Control Panel (Start button>Control Panel)**
3. Open **Device Manager**
 - a. In **Win XP**, double left click the **System** icon, then click the **Hardware** tab, then **Device Manager** button.
 - b. In **Win Vista, Win 7, and Win 8**, click the **Device Manager** icon.
4. Double left click on the "**Universal Serial Bus controllers**" item to expand the list.
5. Right click on the "**USB Serial Converter**" and chose "**Properties**"
6. Click on the "**Driver**" tab. The driver version is displayed in this window (see below)

