

Universal Remove Bottom Cover Procedure 300, 350, I/S, Contour, CPII




14140 NE 200th St.
Woodinville, WA 98072
1.425.398.8282
www.ioline.com


Procedure # 111438 Rev 0

Tools required: Phillips screwdriver.

300, 350

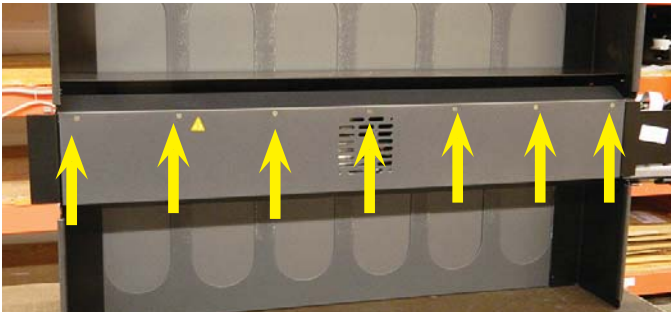

Step 1: Caution: 2 people are required to tilt the 300/350 up as shown. Be careful the machine does not tip when in the upright position. Remove the 7 screws.

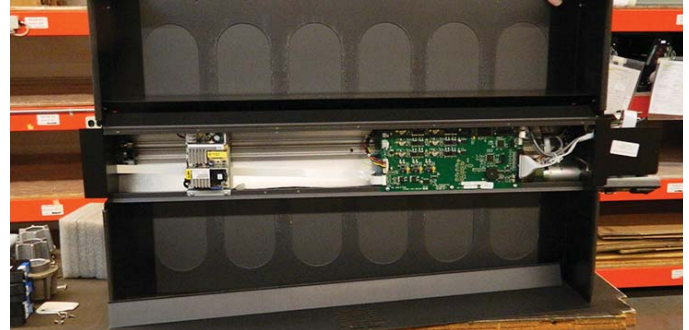

Step 2: Remove the bottom cover. ...FINISHED

I/S, Contour




Step 1: Remove Power and Communication cords and carefully tip the machine on its back. Remove the 5 screws.




Step 2: Remove the bottom cover. ...FINISHED

CrystalPress

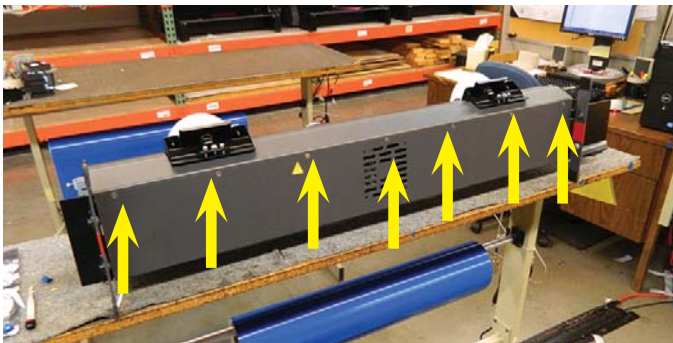

Step 1: Remove Power and Communication cords and carefully tip the machine on its back. Remove the 7 screws.

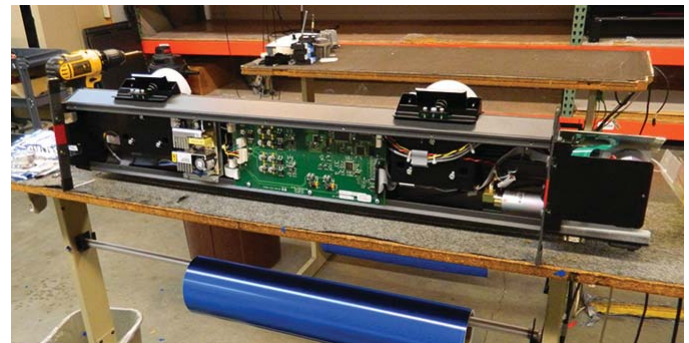

Step 2: Remove the bottom cover. ...FINISHED