


## Upgrading the Ioline 301 R8 and R9 for Vista Compatibility


May 9, 2007

**Important Note:** The 301 upgrade program will search the hard disk for a **Revision 8** or **Revision 9** version of the 301 software already installed on the computer. These are the only two versions that the patch can upgrade to Vista compatibility. Please contact Ioline to upgrade any 301 version older than revision 8.


1. Download the upgrade installation program from the support section of [http://www.ioline.com/tech/software\\_tech.html#DCS](http://www.ioline.com/tech/software_tech.html#DCS).
2. Make sure to write down where the file is stored so that you can find it for the next step.

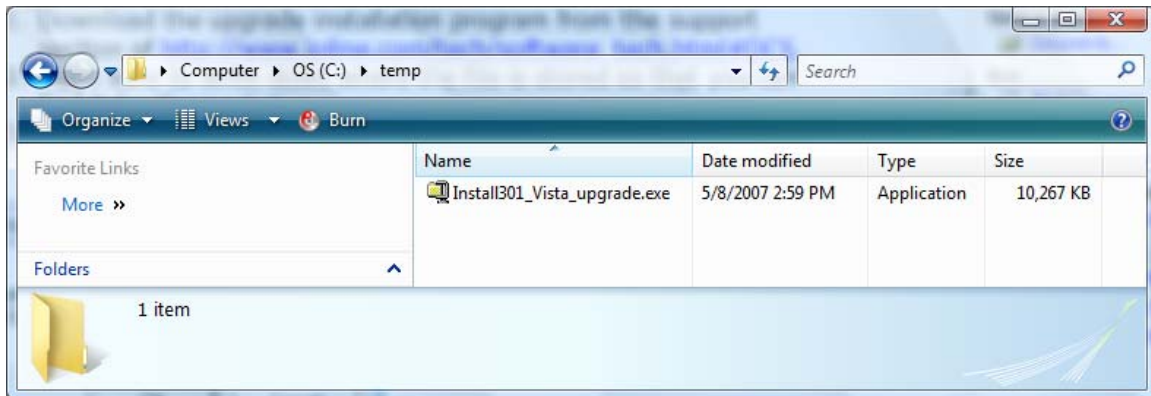


3. Double click on the installation file to begin the upgrade. Click on **OK** to proceed.

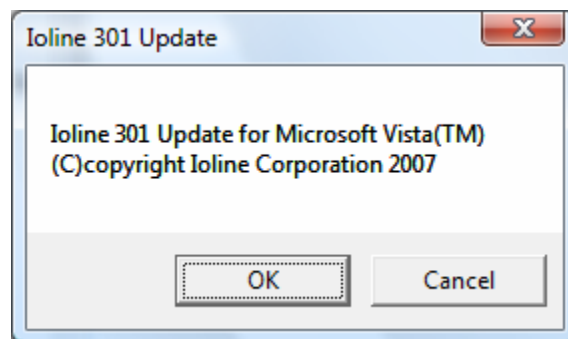


4. Click on **Setup** to start the patch process.

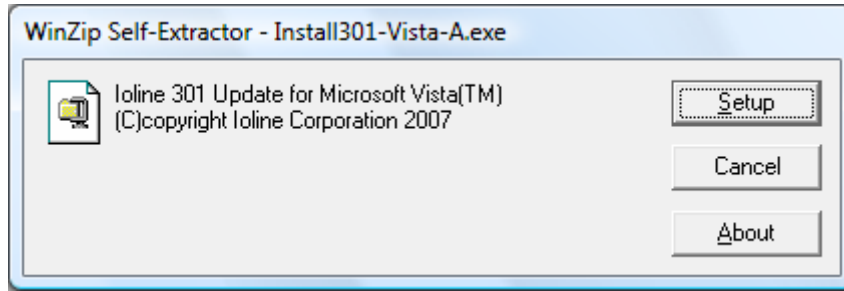


5. The program will search for a compatible version. A message will appear if the patch finds revision 8 or 9 of the 301 already installed on the computer. If no compatible version is found, an error message is displayed and the patch program will exit. Please contact Ioline for assistance if this occurs.

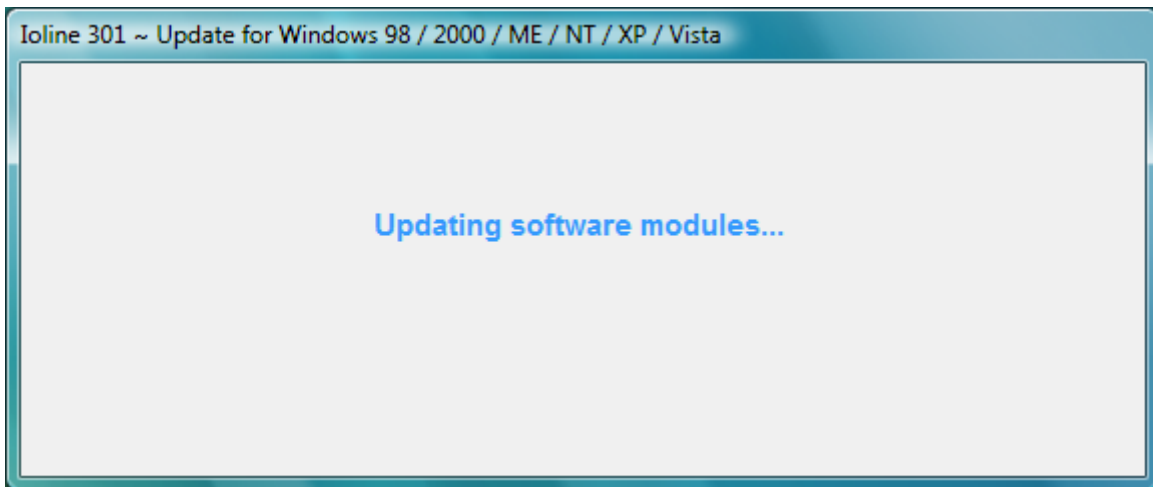


6. Click **Yes** to continue.

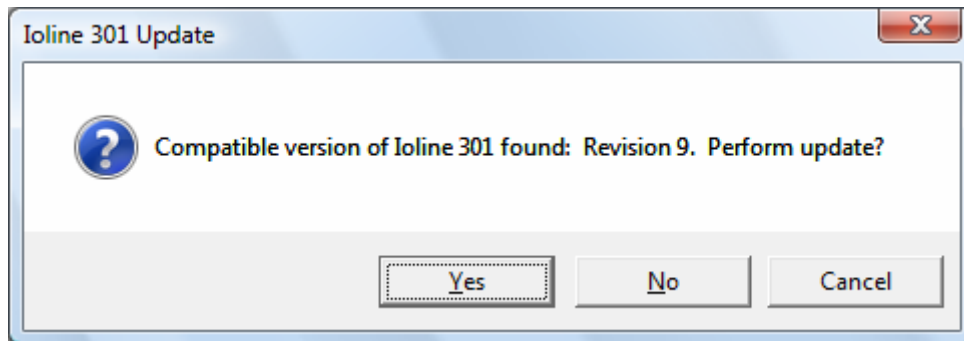


7. When the driver upgrade window appears, click **Next** then **Finish** when the driver installation is complete.

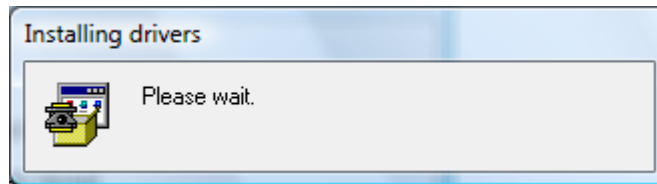

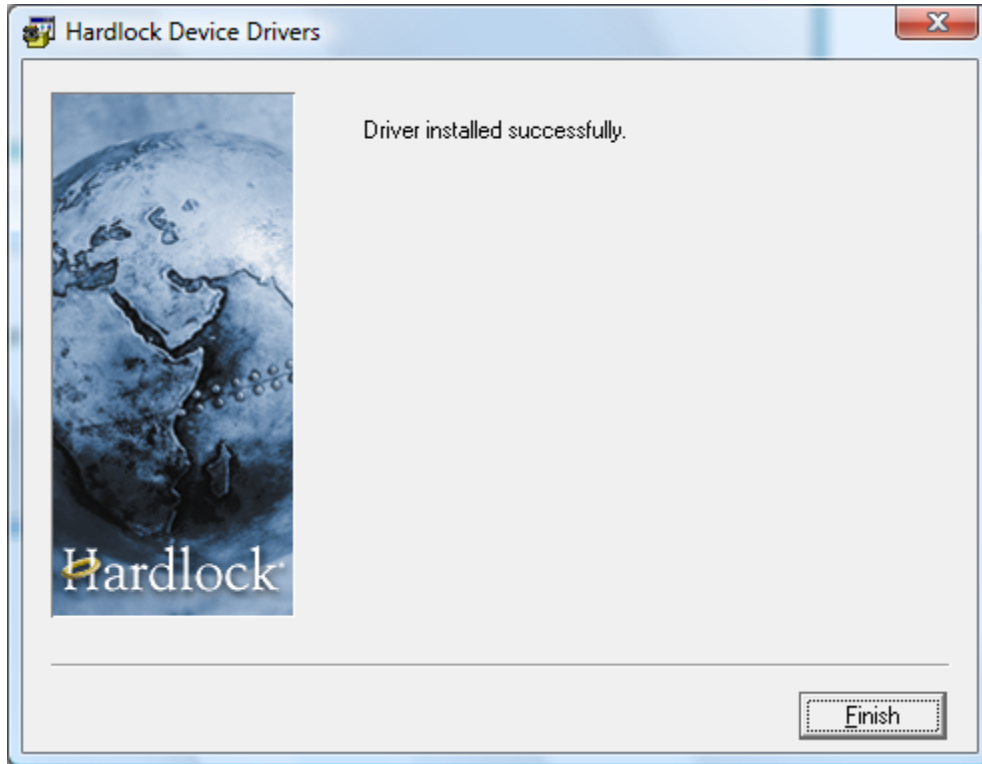

8. A message will appear indicating that the upgrade was successful. Click **OK** then open the 301 software to ensure that the program is working properly.

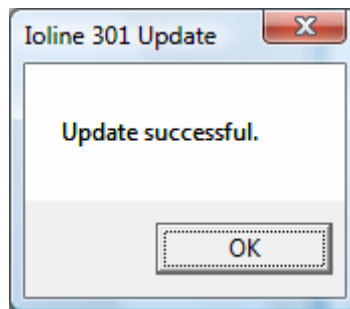

Contact Ioline Customer Service if you have any questions or if the installation program encounters any problems.

Ioline Customer Service Department  
M-F 7:00am to 5:00pm, PST  
Voice Phone: 1.425.398.8282  
Fax: 1.425.398.8383  
[support@ioline.com](mailto:support@ioline.com)  
<http://www.ioline.com>